 


i-Prompt Wireless Control



User Guide

Table of Contents

Remote Settings	2
Start/Stop & Pause	2
Increase/Decrease Speed	2

Remote Settings

Before you are able to use the I–Prompt wireless control you must set the correct ‘Remote Type’ within the software.

To adjust the settings for the remote control tap the ‘Settings’ button at the bottom of the ‘Documents’ list within I-Prompt and scroll down to ‘Remote Settings’, you will then see an option labelled ‘Remote Type’ set this to ‘Wireless’

Please Note: When using the wireless controller the ‘Play’ button must be pressed even when ‘Auto Start’ is enabled in order to activate the remote. Also a ‘Scrolling Speed’ of 5 is recommended for most users when using a remote control.

Start/Stop & Pause

To start the script press the ‘Repeat’ button, to pause press ‘Repeat’ again.

Increase/Decrease Speed

To increase or decrease the scrolling speed of the script use the two ‘Volume’ buttons, each press increases or decreases the speed one increment. The remote control will allow you to increase or decrease the speed to within 3 increments of the ‘Scrolling Speed’ set in the applications settings menu. For example if the ‘Scrolling Speed’ is set to 5 you can increase up to 8 or decrease down to 2.

Break Markers

A ‘Break Marker’ is a character embedded into your script that you can use to jump to certain points within the script using the wireless ‘I-prompt control’.

To jump between break markers pause the script using the remote, you can then use the two 'volume buttons to scroll forward and backwards through the break markers.

Please Note: You will notice a flexible white strip of plastic attached to the side of the remote. This ‘Baffle’ is essential to direct the infra red signals to the remote, please do not remove.

Datavision Limited

3a South House, The Bond Estate, Bond Avenue, Bletchley, Milton Keynes MK1 1SW

Tel: +44 (0) 1908 641858 Fax: 08082801769

Email: sales@datavision.co.uk