



i-Prompter Hardware



User Guide

Table of Contents

Glass Care	2
Glass Insertion	2
Glass Removal	2
Exposure	2

Glass Care

To ensure optimal image quality the i-Prompter utilises an ultra thin beams-splitter glass, Please handle the glass with extreme care.

To clean the glass use a lint free cloth and if necessary use an acid and vinegar free glass cleaning solution.

Glass Insertion

The 60/40 reflective glass must be inserted into the hood with the green dot at the top front of the box, facing the presenter and the red dot facing the camera.

Glass Removal

To remove the glass slide the supplied removal tool back and forth between the Velcro at the top of the glass and the i-Prompter hood until the glass becomes loose enough to remove it without force. The glass may crack if removed without using the removal tool.

Exposure

The i-Prompter/Pro changes the exposure by approximately 1 stop, similar to the affect of a neutral density filter.

Datavision Limited

3a South House, The Bond Estate, Bond Avenue, Bletchley, Milton Keynes MK1 1SW

Tel: +44 (0) 1908 641858 Fax: 08082801769

Email: sales@datavision.co.uk