



# i-Prompter Pro



## User Guide

## **Table of Contents**

<a href="#">Glass Care</a>	2
<a href="#">Glass Insertion</a>	2
<a href="#">Glass Removal</a>	2
<a href="#">Exposure</a>	2

## **Glass Care**

To ensure optimal image quality the i-Prompter utilises an ultra thin beams-splitter glass, Please handle the glass with extreme care.

To clean the glass use a lint free cloth and if necessary use an acid and vinegar free glass cleaning solution.

## **Glass Insertion**

The 60/40 reflective glass must be inserted into the hood with the green dot at the top front of the box, facing the presenter and the red dot facing the camera.

## **Glass Removal**

To remove the glass slide the supplied removal tool back and forth between the Velcro at the top of the glass and the i-Prompter hood until the glass becomes loose enough to remove it without force. The glass may crack if removed without using the removal tool.

## **Exposure**

The i-Prompter/Pro changes the exposure by approximately 1 stop, similar to the affect of a neutral density filter.

---

**Datavision Limited**

3a South House, The Bond Estate, Bond Avenue, Bletchley, Milton Keynes MK1 1SW

Tel: +44 (0) 1908 641858 Fax: 08082801769

*Email: [sales@datavision.co.uk](mailto:sales@datavision.co.uk)*